

wirefree outdoor motor programming instructions


twc

initial pairing

- Remove end cap off solar panel (right hand end).
- Select a channel on remote.

1 - Hold programming button on solar panel for approximately 5 seconds until a clicking sound is heard and LED light will light up once.

2 - Hold stop button down on remote until motor jogs confirming successful pairing (LED light will flash on solar panel 3 times).

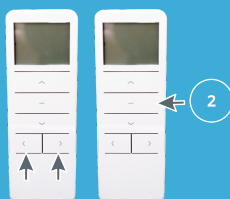

check blind direction

- Press up button to confirm blind will travel in the up direction.

- If blind is travelling in the wrong direction, hold up & down buttons at the same time until motor jogs.

- Check direction of blind to make sure this is now travelling in the correct direction.





setting bottom limit left hand control side

- Press the down button on remote and stop blind before it reaches the bottom of the opening.
- Insert the wand supplied into the white setting hole.
- Turn the wand in an anti-clockwise direction and the blind will lower with each rotation.
- Continue to turn the wand until the desired bottom limit is reached.
- If the blind needs to be raised to adjust the bottom limit, rotate the wand clockwise to adjust.
- Once the bottom limit is reached press and hold the stop button to lock this position (approx. 5 seconds).




setting top limit left hand control side

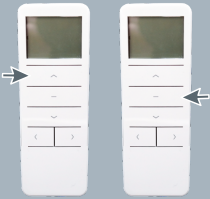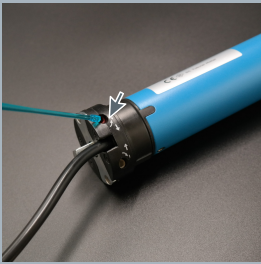



- Press the up button and stop the blind before it reaches the top of the opening.
- Insert the wand supplied into the red setting hole.
 - Turn the wand in a clockwise direction and the blind will raise with each rotation.
- Continue to turn the wand until the desired top limit is reached.
- If the blind needs to be lowered to adjust the top limit, rotate the wand anti-clockwise to adjust.
- Once the top limit is reached press and hold the stop button to lock this position (approx. 5 seconds).

setting bottom limit right hand control side

- Press the down button on the remote and stop the blind before it reaches the bottom of the opening.
- Insert the wand supplied into the red setting hole.
- Turn the wand in a clockwise direction and the blind will lower with each rotation.
- Continue to turn the wand until the desired bottom limit is reached.
- If the blind needs to be raised to adjust the bottom limit, rotate the wand anti-clockwise to adjust.
- Once the bottom limit is reached press and hold the stop button to lock this position (approx. 5 seconds).

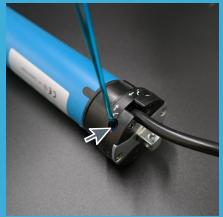

setting top limit right hand control side

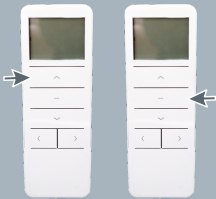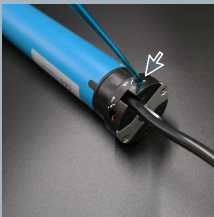

- Press the up button on remote and stop blind before it reaches the top of the opening.
- Insert the wand supplied into the white setting hole.
 - Turn the wand in a clockwise direction and the blind will raise with each rotation.
- Continue to turn the wand until the desired top limit is reached.
- If the blind needs to be lowered to adjust the top limit, rotate the wand anti-clockwise to adjust.
- Once the top limit is reached press and hold the stop button to lock this position (approx. 5 seconds).

finish

Once limits are set, install end cap back on to solar panel (right hand end).



factory reset (if required)

If a factory reset is required, remove end cap, hold programming button down on solar panel until 4 clicks are heard and LED light flashes 4 times (approx. 14 seconds).

